

FREESTANDING MULTIDECK DTG

USER GUIDE

For models DTG**OR** & DTG**HT**



SERVICE

SETUP IS KEY

Do it once, do it right:

Take the time now for long-term efficient performance.



ALWAYS DISCONNECT
this appliance before
cleaning and servicing



Do not use a multi-box
or overload your
power supply.



Servicing should only be
carried out by an approved **SERVICE**
AGENT or registered electrician.

REQUIREMENTS

CERTIFICATION REQUIREMENTS: Persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, and children playing with the appliance is not applicable. The appliance is not to be cleaned with a water jet or steam cleaner. These appliances are intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries and butcheries, but not for continuous mass production of food. This appliance is not intended to be used by laymen in household and similar applications such as: • Staff kitchen areas in shops, offices, and other working environments • Farm houses • Hotels, motels, and other residential type environments • Bed and breakfast type environments.


UNPACK AND PLACE

OPTION 1: ROLL



UNPACK

Remove front, sides and corner pieces and discard (tools required). Place brackets with plywood top to form a ramp. (Brackets are supplied, screwed into pallet at corners of cabinet).

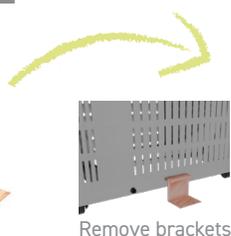

Remove brackets

**CAUTION
TOP HEAVY**



ROLL THE UNIT

off the pallet and down the ramp. Two or more people may be required depending on the size of the unit.

OPTION 2: LIFT



REMOVE front grill



LIFT WITH FORKS

under centre of frame. Check span of forks under unit to avoid any damage to components. Transport to required location.

INSTALLATION

REMOVE



LEVEL

Ensure cabinet is level (door operation + drainage can be affected)



ADJUST FEET

using spanner to level your cabinet



PLUG TO WALL

Do not use multiboxes



CLEAR TAPE

which is securing doors and base



METAL TABS


holding shelves in place during transport



GLASS SHELVES

are wrapped in bubble wrap on base trays. Remove bubble wrap and place glass on shelf frames carefully using both hands

R

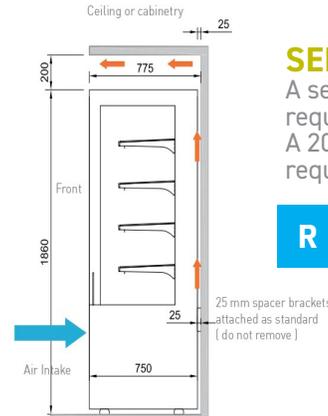

SEPARATION FROM WALL

A separation gap of 25mm is required at the rear of the cabinet. A 200mm gap above the unit is required to ensure hot air extract

R

SHELF ADJUSTMENTS

R

H

NIGHT BLIND

HEIGHT



ADJUSTABLE:

- Height
- Set up flat or angled.

ANGLE



TO ADJUST: LIFT up from back of shelf arms at either end.

TO ANGLE:

PULL FORWARD until 2nd slot locks into place.

REMOVE



SHELVES

can be removed by unscrewing LED socket (HT) OR pulling LED socket (R)



NIGHT BLIND

pull down when unit is not in use to reduce energy consumption

SHELF SETUP REFRIGERATED


R

DTGOR is designed for 3 or 4 shelf setup



4 SHELVES

Slide pin left

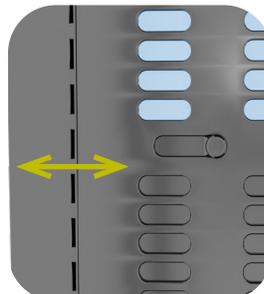

OPEN/CLOSE VENTS

Slide pin left for 4 shelf vents. Slide pin right for 3 shelf vents




3 SHELVES


Slide pin right

DTGOR6 slide up for 4 shelves, slide down for 3 shelves

CONTROLLER FEATURES **R**

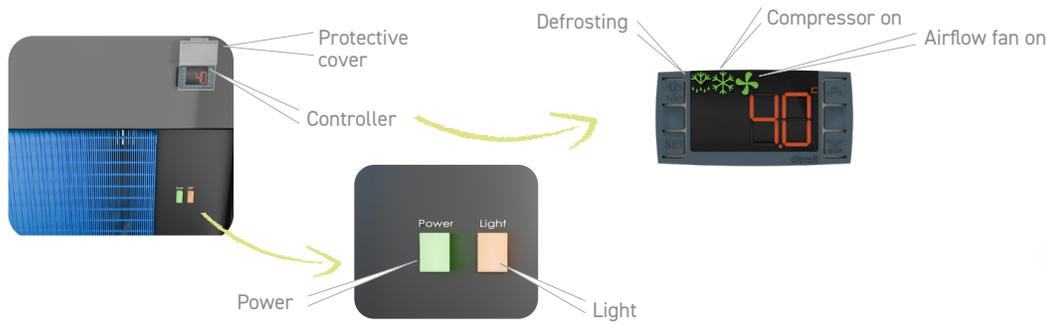

CONTROLLER FEATURES **H**

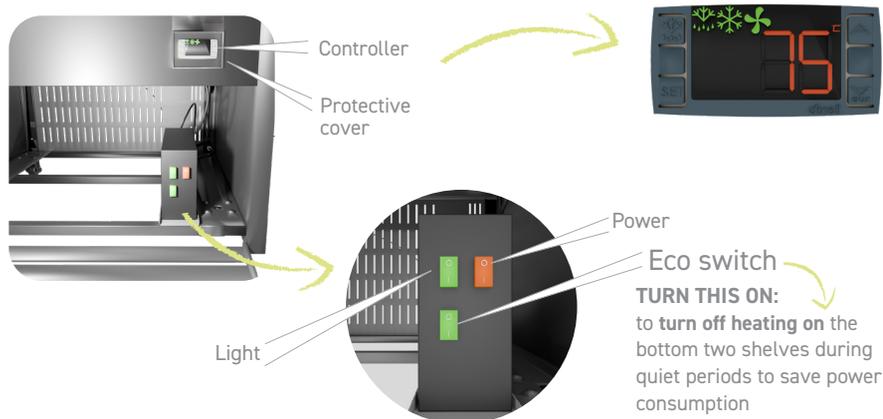


CONTROLLER INSTRUCTIONS

For detailed controller instructions scan the QR code or visit cossiga.com

CLEANING

R

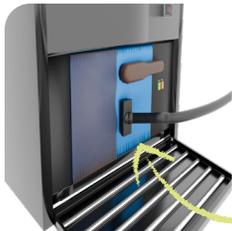

CONDENSER CLEANING

- Every 6 weeks (minimum)
- Pull front grill down to reveal condenser face
- Run a vacuum or brush up and down the condenser face to clean any dust and debris.
- **IMPROVES PERFORMANCE**
- **REDUCES POWER CONSUMPTION**

R



DRAIN

- must be kept clean to avoid blockage, clean every 6 weeks (minimum)
- 1. Unscrew base plate(s) and remove
- 2. Remove any debris from drain

H

R



NO ABRASIVES

Only use suitable stainless-steel cleaners and glass cleaners.

H



LIFT BLACK TEFLON COVER

to clean under deck trays.

ELECTRICAL

Electrical diagrams are located on the electrical box or can be found on cossiga.com or scan the QR below



TROUBLE SHOOTING

	ISSUE	REASON	ACTION
H	Bottom two shelves not hot	Eco switch is turned on	Turn off eco switch
H	Single shelf is not hot	Failed fan or element	Contact your service provider
R	Water leaking from cabinet	- Drain is blocked - Very humid environment	- Unblock drain - Manually empty water from evaporation pan
R	Not cold enough	Condenser face is blocked	Clean condenser face as shown

SPECIFICATION

Model	Frequency (Hz)	Operating Current (AMPS)	Power (kW)	NZ/AUS Power cord	UK Power cord	Voltage (V)
DTGOR6	50	5.5	1.04	10 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240
DTGOR9	50	5.8	1.21	10 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240
DTGOR12	50	7	1.46	10 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240
DTGOR15	50	11	1.53	15 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240

Model	Frequency (Hz)	Operating Current (AMPS)	Power (kW)	NZ/AUS Power cord	UK Power cord	Voltage (V)
DTGHT6	50	7.2	1.9	10 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240
DTGHT9	50	10.5	2.33	15 AMP 3 PIN PLUG	13 AMP 3 PIN PLUG	220-240

OUR WARRANTY

OUR WARRANTY:

2-Years parts & labour*



Save energy, protect your asset and keep your warranty valid.

PREVENTATIVE MAINTENANCE

Enjoy **peace of mind** and qualify for our 2-year warranty with 6-monthly preventative maintenance.

Following our cleaning and maintenance guidelines will extend the life of your food display, improve energy efficiency and protect your investment. Lack of maintenance will void your warranty so contact our service team to schedule preventative maintenance for your Cossiga products.

*Subject to 6 monthly preventative maintenance.

See www.cossiga.com for exclusions + full terms and conditions

