

BTG HOW TO Swap the Baffle for front venting


COSSIGA



Applicable models:


BTGRF6
BTGRF9
BTGRF12
BTGRF15
BTGRF18
BTGOR6
BTGOR9
BTGOR12

NOTE: All BTG models come standard with the baffle set up for rear venting


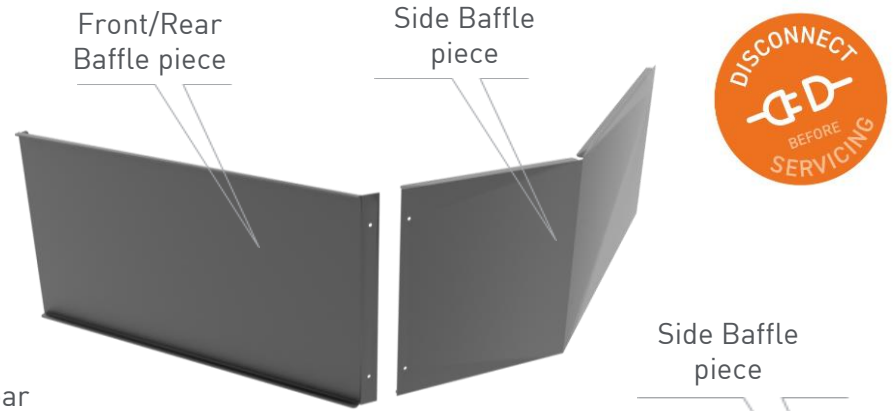


Front/Rear
Baffle piece

Side Baffle
piece

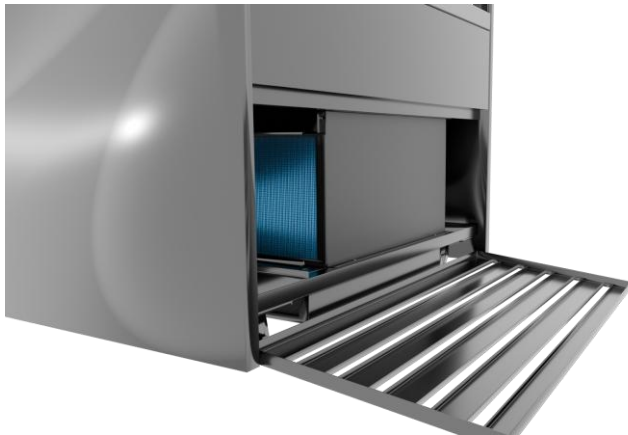

1. Pull the top of the front grill down to access the baffle

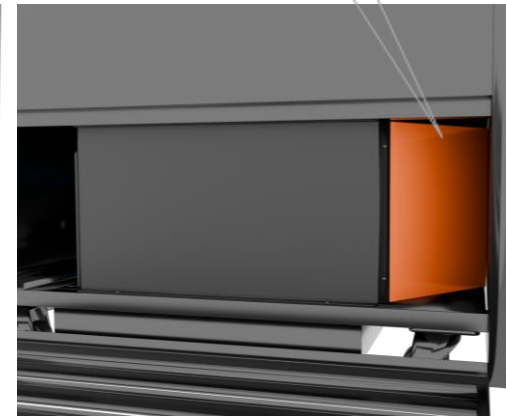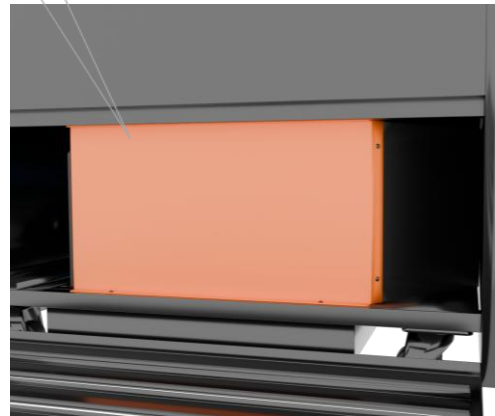

2. There are two parts to the baffle, one that sits at the front/rear of the cabinet and one that slides down the side of the cabinet







3. Remove the screws that hold the rear grill on to the rear of the cabinet and move the grill out of the way



5. Remove the screws attaching both baffle pieces together. The front baffle piece can then be removed from the front of the cabinet

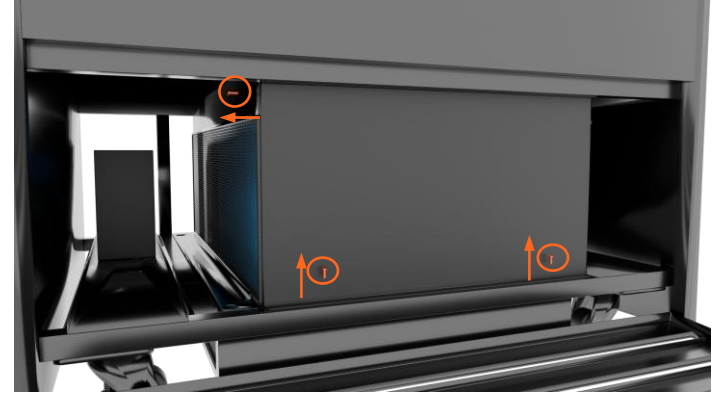


4. Back at the front of the cabinet, remove the screws that attach the front piece of the baffle to the cabinet

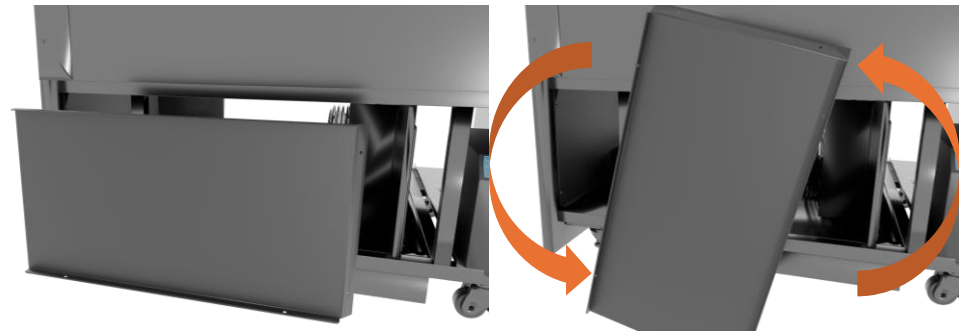


6. Move the front/rear baffle piece to the rear and rotate it. Place this piece to the side for now




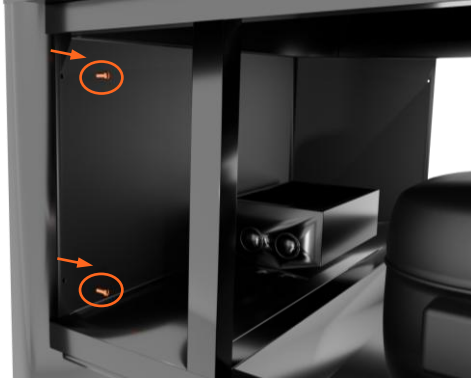


- 7.** ■ Remove the 2 screws holding the side piece of the baffle to the cabinet at the rear of the cabinet

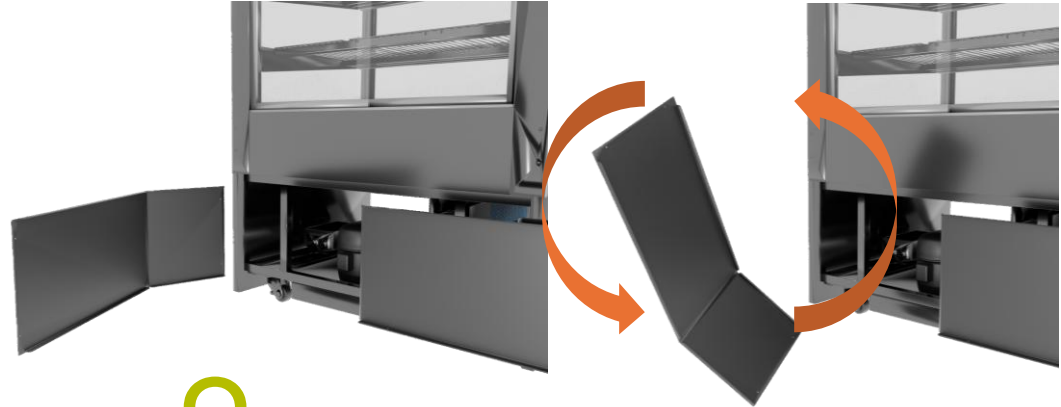

- 8.** ■ Slide the side piece of the baffle out and rotate it as shown

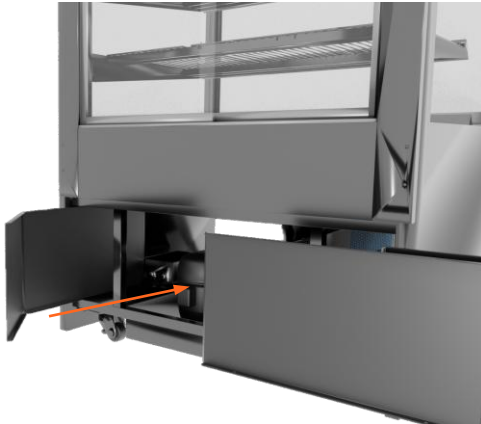


- 9.** ■ Slide the side piece of the baffle back into the cabinet, hard against the inner wall of the cabinet

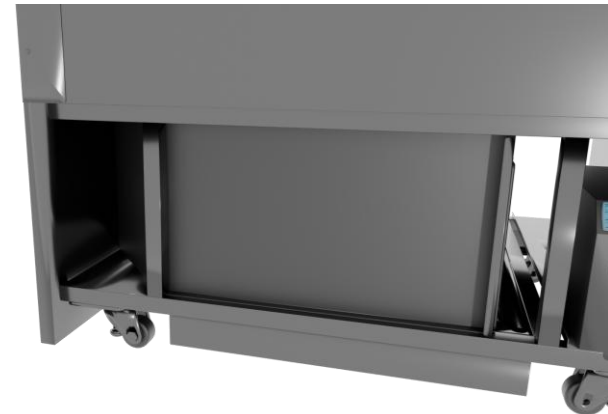

- 10.** ■ Place the front/rear piece of the baffle in position at the rear of the cabinet



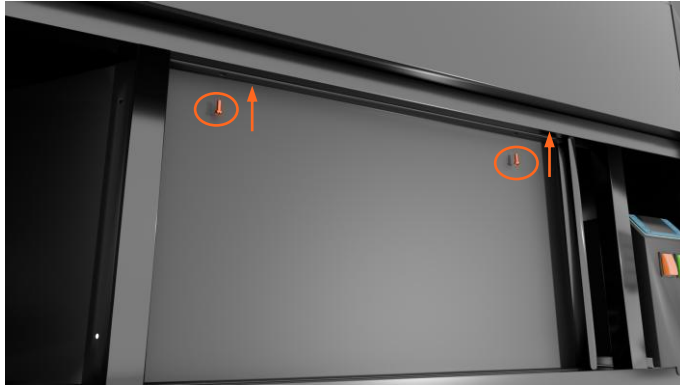


11. ■ Attach the front/rear piece of the baffle to the cabinet by inserting the two screws upwards through the attachment holes



12. ■ Reinstall the screws that attach both baffle pieces together



13. ■ Place the rear grill back into position and reinstall the screws

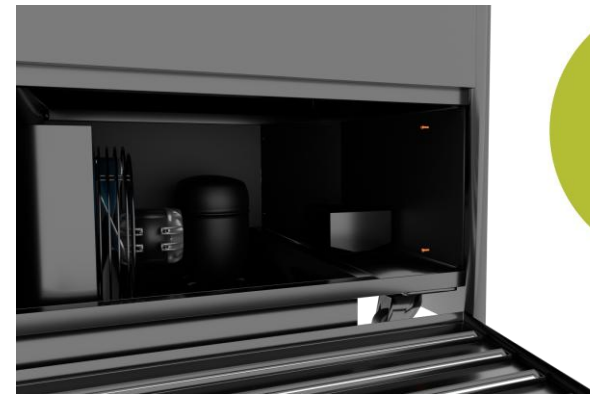

14. ■ At the front of the cabinet, attach the side piece of the baffle to the cabinet by inserting the two screws into the side wall through the attachment holes

