

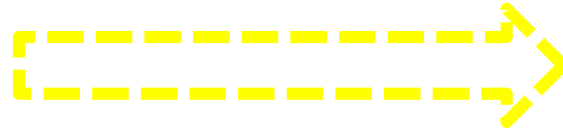


1. Remove the side panel

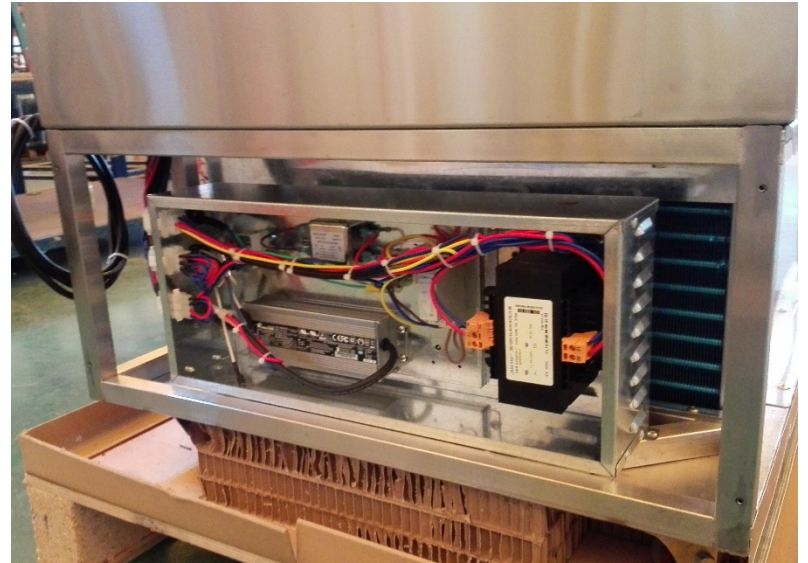

2. Move out the fuse holder

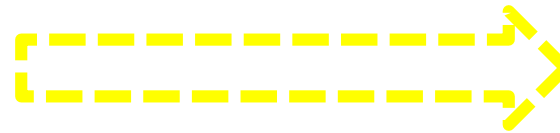

3. Remove the fuse



Remove the fuse

4. Re-install all the parts.

Re-install all parts