

SERVICING key to maintaining your cabinets

Accessing fans and coil (RF)



1. Unscrew base plates



2. Remove trays



3. Lift+ remove grills




4. Lift panel to expose fans and coil

Deck height adjustment (RF)



Use brackets provided to adjust deck height

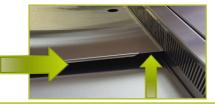

CERAMIC CLEANING



To thoroughly clean your glass ceramic cooktop, first remove dirt and food with suitable metal scraper or special sponge for glass ceramic cooktops



Once the glass ceramic cooktop has cooled, put a few drops of suitable cleaner on it and rub it on with a paper towel, a clean cloth or an approved cleaning sponge

Then wipe the glass ceramic cooktop with a damp cloth and dry it with a clean cloth or an approved cleaning sponge.

CONTROLLER INSTRUCTIONS









AIRFLOW FAN ON



PRESS FOR MORE THAN 3 SECONDS TO TURN ON **EXTRA DEFROST**

TO ADJUST TEMPERATURE









Il controllers are preset

USER GUIDE FOR LINEAR SERIES

This is a guide only. If you are unsure of any aspects of the installation or operation, please contact us or visit our website www.cossiga.com

SAFETY



Always disconnect this appliance before cleaning and servicing




Servicing should only be carried out by an approved service agent, registered electrician or refrigeration engineer



Do not use a multi-box or overload your power supply

INSTALLATION

Your cabinet has been delivered fully assembled. Please check nothing has moved during transit

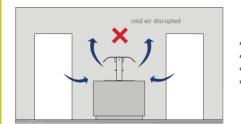

GET

STARTED

AVOID

- Drafts from doorways
- Airflow from air-conditioning ducts
- Hot air from motors i.e. refrigerators • Direct sunlight

Also applies disruption on Bain Marie and Ceramic Top units

1. Check bench cutout is as per table on website





2. Lift unit into place use lifting brackets

Lifting brackets are fitted to assist emoving the unit from the packaging and placing in cabinetry.

Use a bar that can fit through the 35 x 35mm square hole (not supplied)



Use four people lifting each corner.

> After the unit has been placed in the required position remove lifting brackets.Retain bolts and screws for fixing the gantry post.


GANTRY ASSEMBLY



Bain Marie (BM) & Ceramic Top(CM) Remove side post cover lift up and out from the base

Position gantry assembly onto base screw up fixing bolts with washers from underneath on both sides.

Lamp power cable - feed through large hole in deck

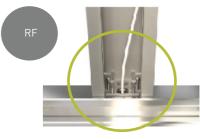

Refrigerated(RF) gantry screw down from above.

Screw gantry assembly down on





Plug into socket and screw up






Install Cover

On each side post slide up the post cover panel. position into clips and pull down to fit.


NOT **USING A GANTRY?**

If the gantry is not used a blanking plate is supplied to cover gantry fixing holes. Insert into position each side and fix with a bead of food grade

GLASS ASSEMBLY

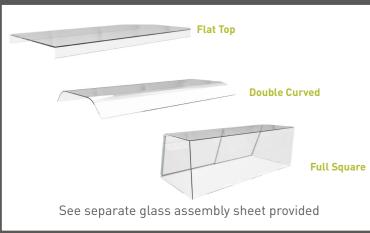

EXTRACTION FAN

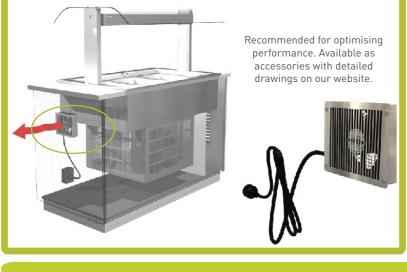

SHELF ASSEMBLY




The 4 shelf clamps -


- 1.Release bottom screw to open clamp
- 2.Screw in clamp to post holes



3.Insert glass shelf and centre. Tighten shelf clamps using underneath scew to suit.

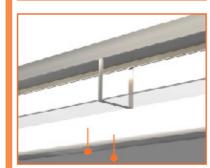

NOTE: LS5 - LS6 units come with a two piece glass mid shelf and bracket. The bracket is fixed to the middle underside of

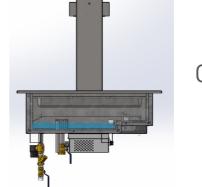


0R

BAIN MARIE INSTALLATION

Your LS Bain Marie is dual purpose and can be run dry, manually filled wet or can be plumbed in for auto fill + drainage

Note: The water stops just under the element. This provides good humidity with minimum steam.

FOR DRY OPERATION

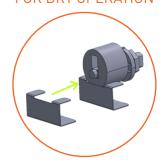

Use stainless bracket to disengage float switch

BAIN MARIE

DUAL

PURPOSE

WET OR DRY



Needs to be kept clean to stop the build up of lime scale

Clean Daily

Clean with hot soapy water

Rinse + Dry

A commerical descaler may be required periodically



IF YOUR BAIN MARIE HAS NO POWER?

Check the 'trip switch' in the electrical box

RESET

If it continues to trip please call a service techician

TO AVOID STEAM ON GLASS?

Ensure pans fit tight - NO GAPS

Leave rear door slightly open

HALOGEN LAMPS

Life span of each bulb is between 1500 and 2000 hours which is approximately 7-10 weeks when running 24/7 or 27-35 weeks when running at 8 hours a day

Bulbs are incredibly sensitive to vibration and can cause premature blowing or shattering. Ensure doors are not slammed and do not allow steam moisture to build



Light Bulb Type 64243011 240V 300W Clear Quartz Jacket Halogen Infra-Red Catering Lamp

CONDENSER CLEANING



A CLEAN CONDENSER MEANS.

- / Better Performance
- ✓ Lower Power Consumption
- Longer Cabinet Life

CLEAN EVERY 2 WEEKS!





Remove water and wipe pan

EVAPORATION PANS

RF UNITS

Designed to boil off excess water produced by your cabinet

NEED TO BE KEPT CLEAN!

Disconnect the power and unscrew and remove the rear


cover to access pan



CLEAN ME!

REFRIGERATION VENTILATION key to the efficient running and long life

Ensure condensor unit has adequate ventilation as per Cossiga specifications

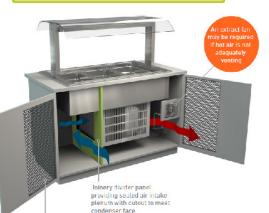


allowing good airflow

No front ventilation required if back is completely clear

ans extracting

Make sure the fan is drawing cool and hot air can escape

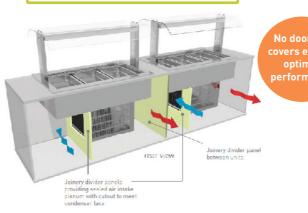

ALL SPECIFIC MODEL VENTILATION DRAWINGS ARE AVAILABLE ON OUR WEBSITE VENTILATION MUST BE CORRECT FOR WARRANTY TO BE VALID