
## SERVICING



### **ALWAYS DISCONNECT CABINET BEFORE SERVICING**


An electrical wiring diagram can be located under the hood of electrical box

LED driver and electrics can be located in the hood or electrical box

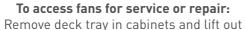

Remove stainless cover

This will allow access to fans, elements and coil

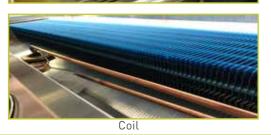

Electrical diagrams **Exploded spare parts Refrigerated parameters** 

Can be found on our website: www.cossiga.com



# **CONTROLLER INSTRUCTIONS**



SET POINT WILL FLASH

PRESS AND HOLD

# USER GUIDE FOR TOWER AND LP PLUS



This is a guide only. If you are unsure of any aspects of the installation or operation, please contact us or visit our website www.cossiga.com

### **SAFETY**



Always disconnect this appliance before cleaning and servicing



Servicing should only be carried out by an approved service agent, registered electrician or refrigeration engineer



Do not use a multi-box or overload your power supply

# INSTALLATION

Your cabinet has been delivered fully assembled. Please check nothing has moved during transit



**REMOVE** Cable ties + any remaining stainless protection sheets



**REMOVE** clear tape which is securing doors and base plates



**REMOVE** yellow tabs holding shelves in place



Ensure cabinet is level (door operation and drainage can be affected )



Adjust feet using spanner to level your cabinet



No Multiboxes



Avoid placing under air vents or in direct sunlight

### **SHELVES**



#### Adjustable:

- Height
- Flat or Angled

#### To Adjust:

- Remove Racks
- LIFT up from back of shelf arms at either end
- To angle PULL FORWARD until 2nd slot, lock into place
- Shelves can be removed completely

## LED LIGHTING



Can be disconnected from rear pillar by unscrewing

### LED are easily replaced:

- Remove shelves from cabinet
- Unscrew extrusion from end bracket (2 screws)
- Slide old LED out and slide new one in





 $\triangle A$ 

PUSH ARROWS TO ADJUST SET POINT



### **VENTILATION**


Ensure condensor unit has adequate ventilation as per Cossiga specifications

No front ventilation completely clear

Make sure the fan is drawing cool and hot air can escape



NEVER stack boxes behind as it will block rear vents

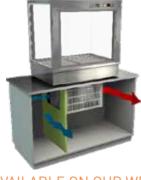

nust be separated from Air OUT

ALL SPECIFIC MODEL VENTILATION DRAWINGS ARE AVAILABLE ON OUR WEBSITE VENTILATION MUST BE CORRECT FOR WARRANTY TO BE VALID

# CONDENSER CLEANING key to maintaining your cabinets



A CLEAN CONDENSER MEANS.

- Better Performance
- Lower Power Consumption
- Longer Cabinet Life

Always disconnect power before

NO abrasive pads or

cleaners







Remove the small rear grill to access the condenser face

CLEAN EVERY TWO WEEKS

### LOADING



**NEVER LOAD PRODUCTS OVER INTERNAL AIR VENTS** 

**DO NOT PLACE PRODUCTS OVERHANGING SHELVES** 

Product **MUST** enter at correct temperature:





orage cabinet

# **EVAPORATION PANS**

Designed to boil off excess water produced by your cabinet

#### **NEED TO BE KEPT CLEAN!**

Disconnect the power and unscrew and remove the rear cover to access pan


Remove water and wipe pan



CLEAN ME!

Your unit can be plumbed into your waste, see website for details

# **CLEANING**

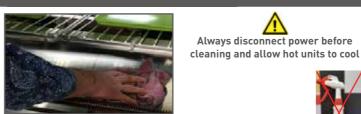

ONLY USE SUITABLE STAINLESS STEEL CLEANERS AND GLASS **CLEANERS** 

Brush door track to remove crumbs and ensure door slides smoothly

Spray suitable silicone on tracks regularly to ensure door slides freely



To clean under deck trays lift base plates and then unscrew the wingnuts to expose the coil and fan box

Gently wipe or vacuum around coil and fanbox

The fan box can be lifted to wipe underneath

Rest glass door on feet when cleaning

NO HOT WATER ON GLASS

# **DOORS**



To remove doors, lift door up and pull bottom of door towards you

Lower door out of top track

Reverse procedure to reinstall door

Brush up

ONLY!

Be careful when putting doors on the ground whlist cleaning

**DO NOT DAMAGE ROLLERS** 

Spray rollers regularly with food grade silicone spray to ensure rollers glide easily

Door rollers are secured by screws, if they become dislodged remove screws,tap back in place and re-secure screws





Black double glazed rollers should be in pairs

with uneven side facing out

## HALOGEN LAMPS

Life span of each bulb is between 1500 and 2000 hours which is approximately 7-10 weeks when running 24/7 or 27-35 weeks when running at 8 hours a day

Bulbs are incredibly sensitive to vibration and can cause premature blowing or shattering. Ensure doors are not slammed and do not allow steam moisture to build on globes



**Light Bulb Type** 

240V 300W Halogen Infra-Red Catering Lamp R7s Cap



**CAUTION:** 

Cooling fins are sharp

Door seals slide out for cleaning or replacement





Need to be kept clean to stop the build up of lime scale

**Clean Daily** 

Clean with hot soapy water

Rinse + Drv

A commerical descaler may be required periodically

### IF YOUR BAIN MARIE HAS NO POWER?

Check the 'trip switch' in the hood under black cap

#### **RESET**

If it continues to trip please call a service techician

#### TO AVOID STEAM ON GLASS?

Ensure pans fit tight - NO GAPS

Leave rear door slightly open

64243011 Clear Quartz Jacket