cossiga

Applicable models:
DTGHT6
DTGHT9

CAN BE UNDERTAKEN BY
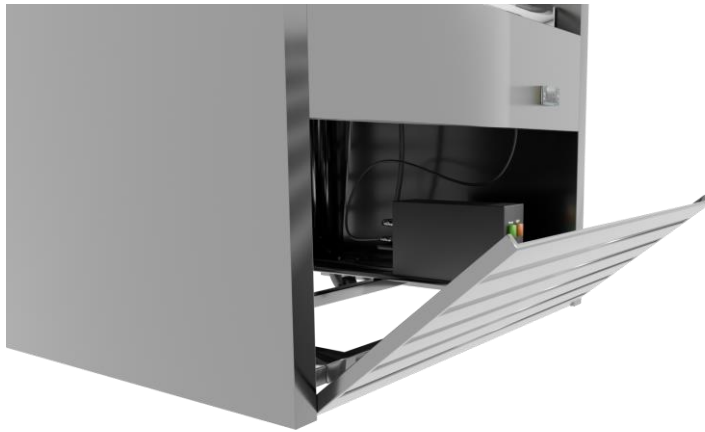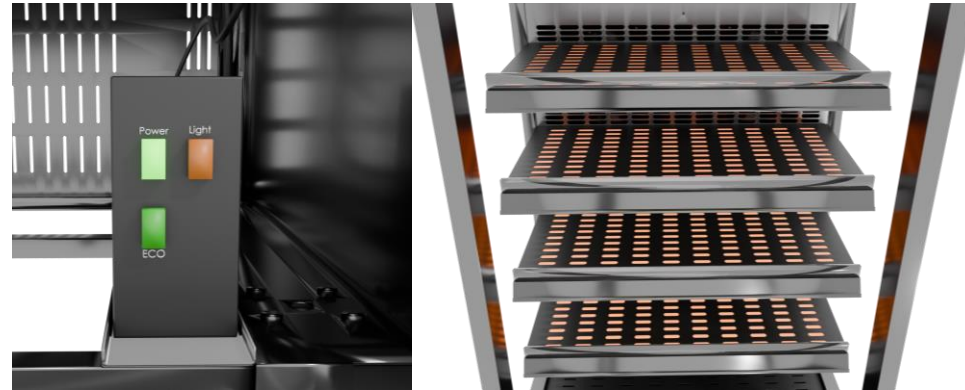A TRAINED OPERATOR

1.
Pull the top of the front grill
down to reveal the control box

2.
Turn the power switch on to start
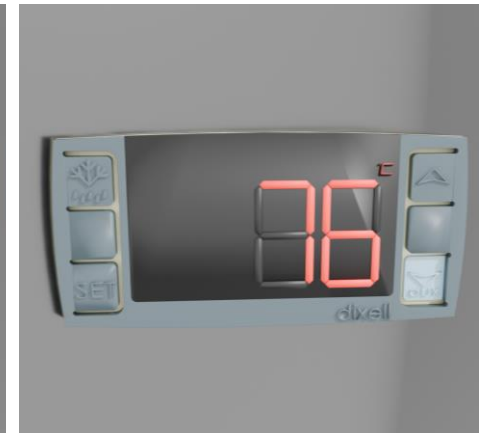the cabinet and get the shelves
heating up to temperature

Power Light

ECO

3. Turn the Light switch on to turn the under-shelf lighting on

4. Turning on the ECO switch will turn off the bottom two shelves to save power during quiet periods

5. To change to temperature of the cabinet, hold the SET button down on the controller until the °C starts flashing

6. Press the up or down arrows to change the temperature. Press the SET button to lock in your chosen temperature