



Tools Required

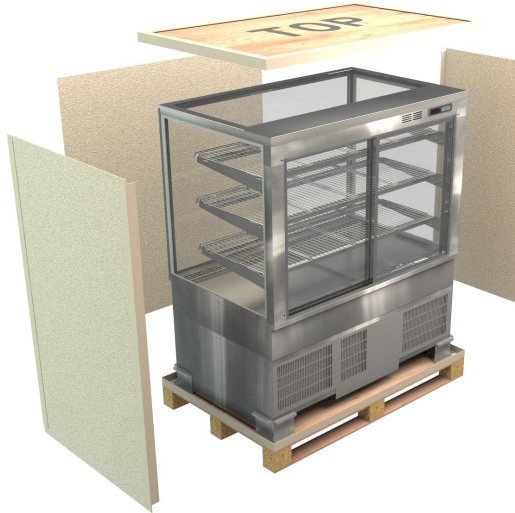

1. Place the boxed unit on a level floor area. Remove plywood top cover and put aside. Remove front, side and corner pieces and discard.

2. Un-screw the metal bottom corner brackets from the pallet base and put aside.

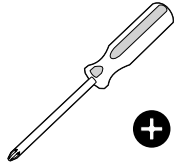

3. Place three or four of the corner brackets on a level floor in front of the bottom pallet with the **rear of the cabinet facing the ramp**. Place the plywood top cover on the floor and corner brackets to form a ramp.



4. Carefully roll the unit off the pallet down the ramp. Two or more people may be required depending on the size of the unit.