


PC Door



Remove the PC doors , inside glass and loosen the LED holder screws

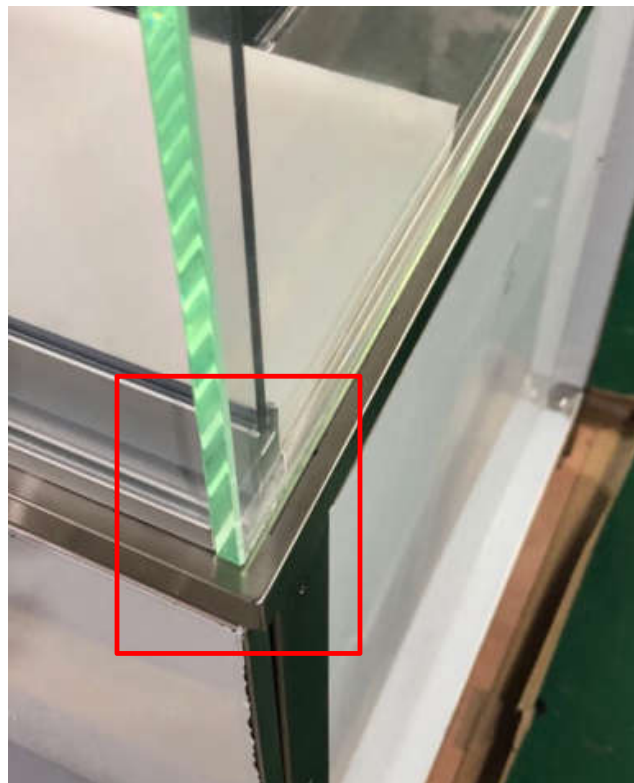

Mark down four corner position  
Using knife cut the double  
sided tape between the glass  
and steel



LED Wire

When cut the double sided tape , be careful the LED wire and Hot Aluminum Bar Wire

Hot  
Aluminum  
Bar Wire



Tear the red tape , install the new glass along the mark and compress.  
After that , install the inside glass , LED lamp holder and the PC doors.

---

**cossiga**

Making food look great