


How To

Fit protective sheathing on elements

cossiga



1. Before Replacement

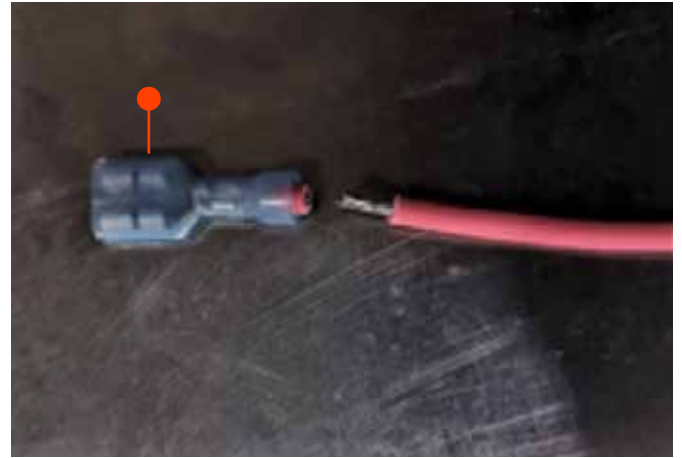


2. Cut off the original blue fully insulated terminals and open the wires




3. Reclamp the new connector



4. Cover the connector with rubber sheath

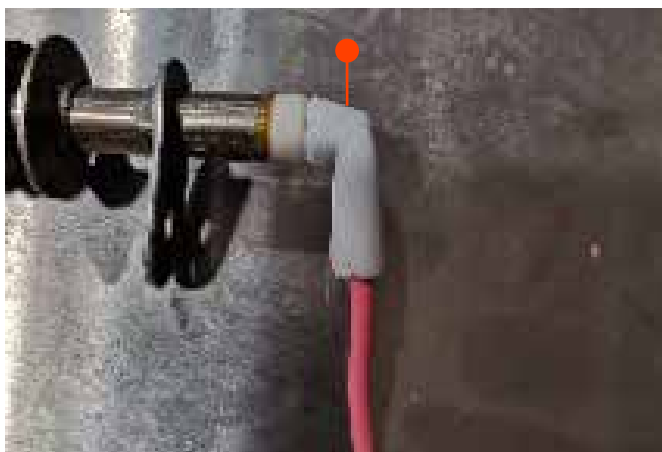

5. Connect the heating element to the connector and put rubber sheath over for insulation

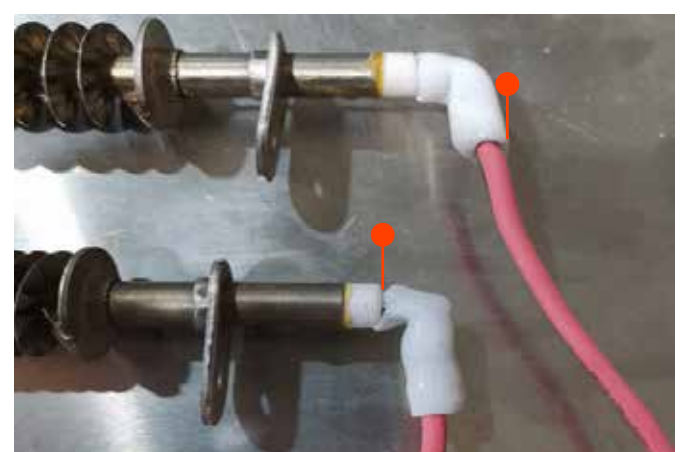

6. Complete the connector protection on both elements

How To

Fit protective sheathing on elements

cossiga



- 7.** Put the black high temperature casing (200°C) on the original wiring.



- 8.** Connect the rubber sheath to the terminal to complete the protection process

