




Applicable models:

BTGRF6
BTGRF9
BTGRF12
BTGRF15
BTGRF18


BTGHT6
BTGHT9
BTGHT12
BTGHT15

BTGAB6
BTGAB9
BTGAB12
BTGAB15

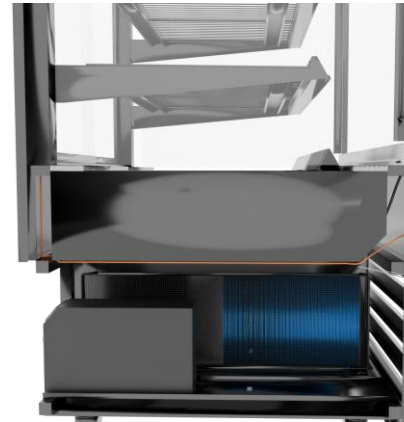

The heated front glass wire travels down the side of the cabinet and up the rear pillar

Heated front glass wire is only in RF models

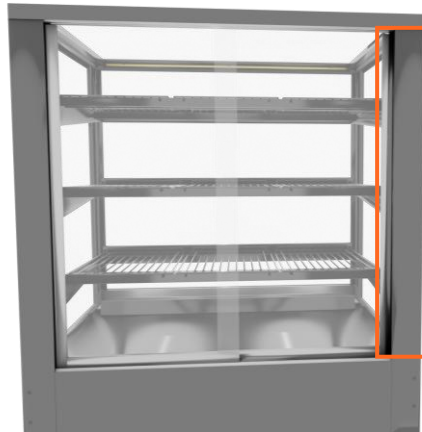

1

- The rear right panel needs to be removed to allow access to the heated wire connection (RF only)



2

- Remove the top screw located on the edge of the panel by the top door track (RF only)





3. Remove the 2 screws at the bottom of the rear edge panel (RF only)



4. Unclip the heated wire from the connection in the rear pillar and feed the wire back through the hole at the base of the pillar (RF only)




5. Re-attach the 2 screws at the bottom of the rear edge panel (RF only)



6. Replace the top screw of the rear edge panel (RF only)




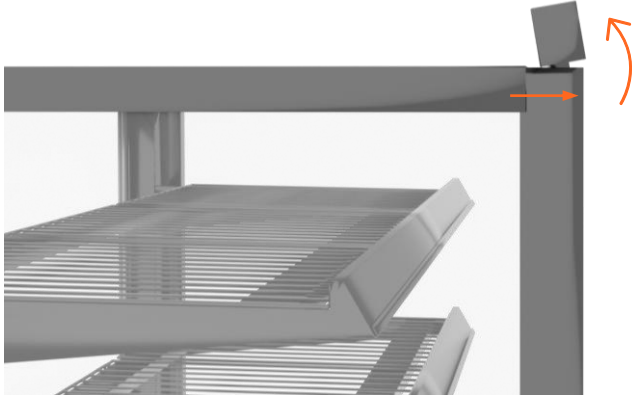

- 7 ■ Pull the front top trim forward and rotate upwards



- 8 ■ Using the finger slots, pull the front glass forward, supporting it with one hand

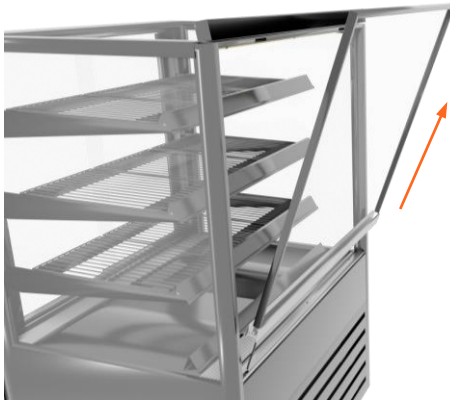

- 9 ■ With the front glass tilted forward as far as it can, lift the front glass with glass bracket upwards with the heated wire pulling through the cabinet frame




- 10 ■ Unclip the canopy LED from the top bracket and place the LED to the side







- 11.** Remove the screws that attach the top bracket to the cabinet and remove the bracket from the cabinet

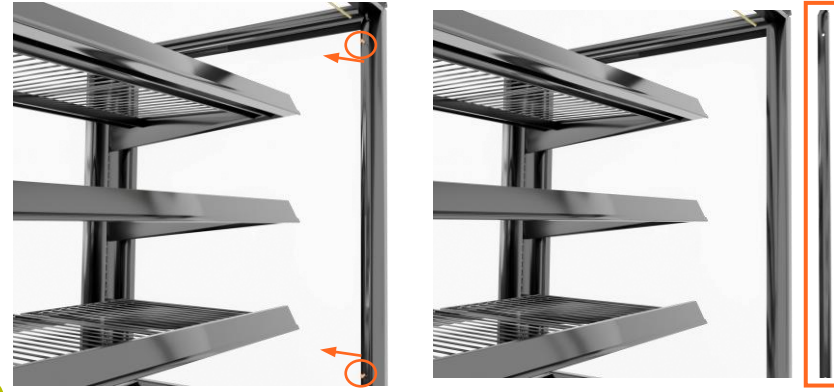

- 12.** Remove the screws that attach the right-side bracket to the cabinet and remove the bracket

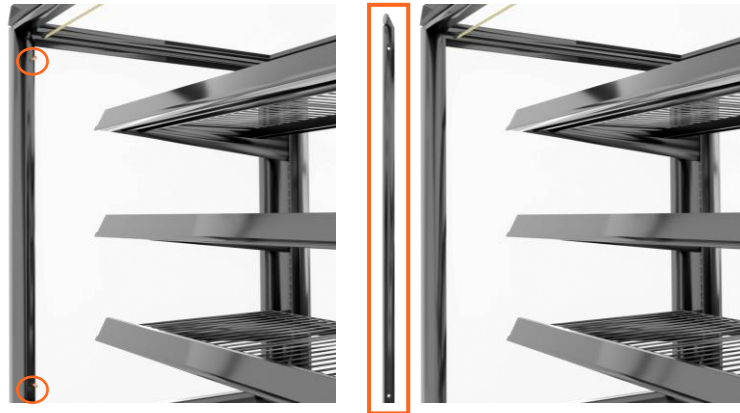

- 13.** Remove the screws which attach the left side bracket to the cabinet and remove the bracket

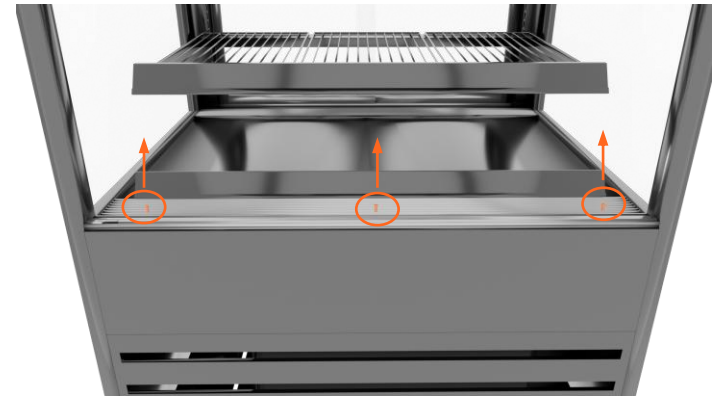


- 14.** Remove the screws that attach the base bracket to the cabinet and remove the base bracket






15. The front door kit includes top and bottom door tracks and left and right side brackets

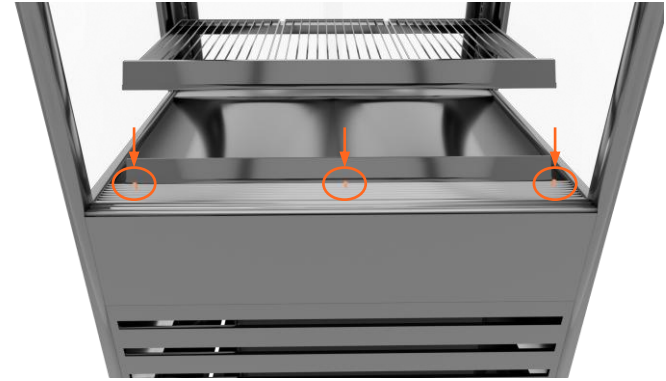

16. Install the bottom door track with the same screws you previously removed

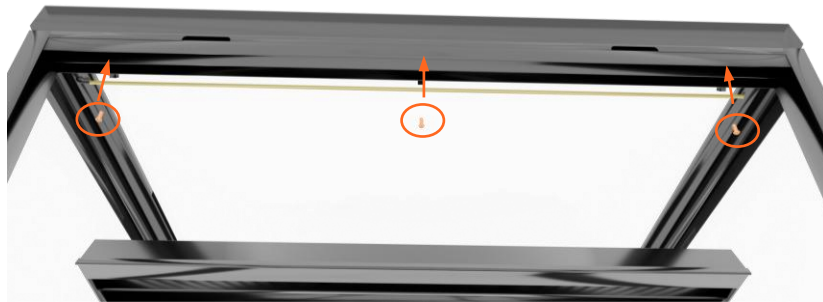

17. Attach the top door track using the same screws you previously removed



18. Clip the canopy LED into the top door track clips







19. Attach the sliding doors right side bracket to the cabinet using the same screws that you removed



20. Attach the sliding doors left side bracket to the cabinet using the same screws that you removed

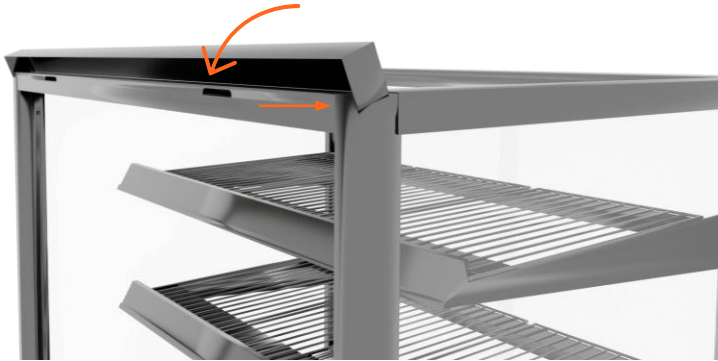

21. Flip the top front trim down and slide backwards into position

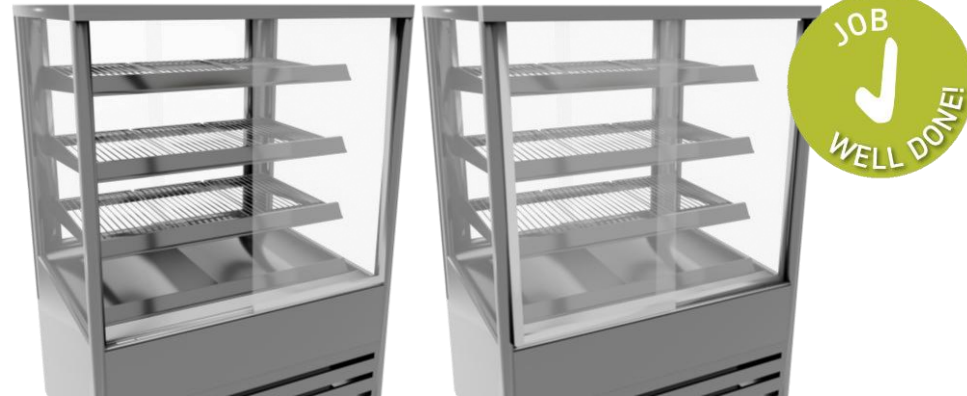

22. Place the doors into their tracks starting with the right door, lifting up into the top track before dropping the door down onto the bottom track

