Replacement Ceramic Heater Part (S17-209)

#### cossiga



Applicable models:

LSCM2

LSCM3 LSBM3


LSCM4 LSBM4

LSCM5 LSBM5

LSCM6 LSBM6





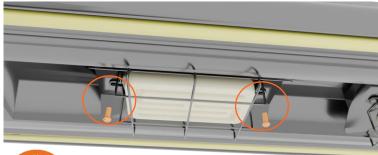



To remove the wire guard, unscrew the two screws that hold it to the heater housing



Remove the screw that attaches the heater housing to the gantry







Move the housing to one side before pulling it down to release it from the gantry



Pull the clip down to release the ceramic heater from the housing






heater from the housing and slide

a new heater into the housing

# cossiga

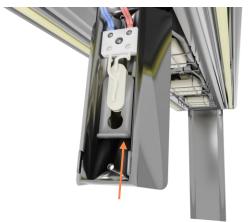

Slide the clip up to secure the new ceramic heater to the housing



Screw the new ceramic wiring to the wiring of the housing



Place the heater housing back into the gantry, making sure not to crush any of the wires




Slide the housing to the side to lock it in position in the gantry





Reattach the screw to hold the housing to the gantry

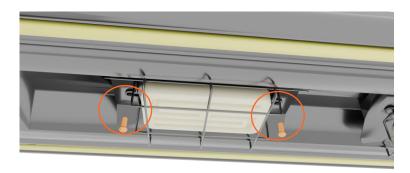

Reattach the wire guard to the heater housing using the same two screws

